


# Installation Instructions

**PA-2436-OV/PA-3048-OV**

## SUGGESTED TOOLS AND MATERIALS



Screwdriver




Level



Drill



Tape Measure

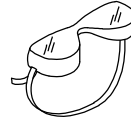

Safety Glasses




Pencil


## PARTS & HAREWARE INCLUDED






Anchor 6x



Screw 6x




Level 1x

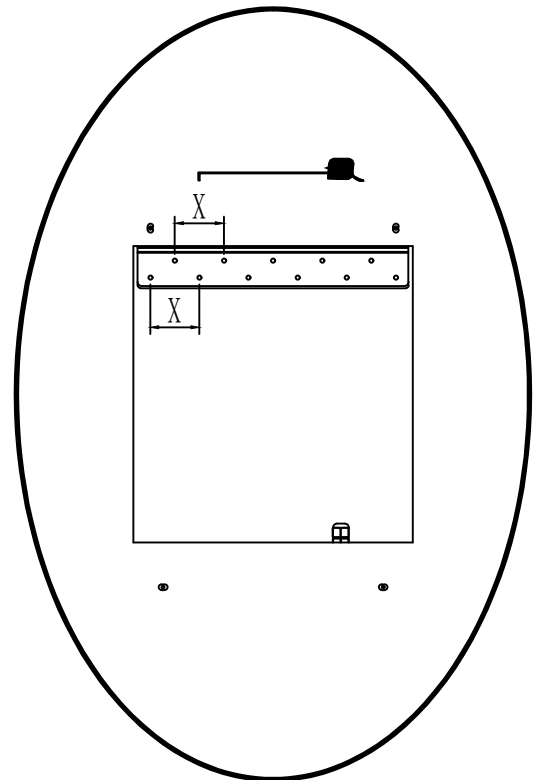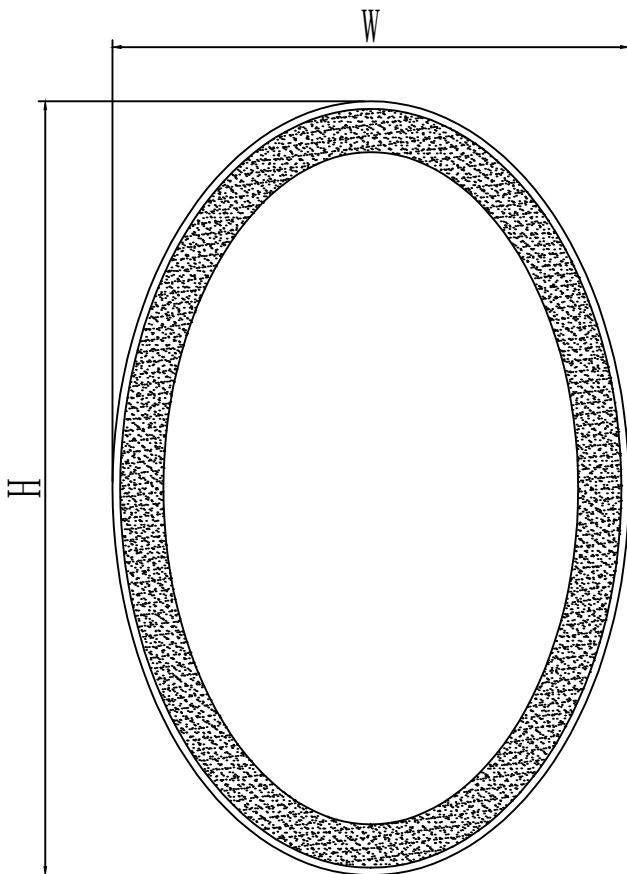

# Installation Instructions

PA-2436-OV/PA-3048-OV

## SUGGESTED TOOLS AND MATERIALS

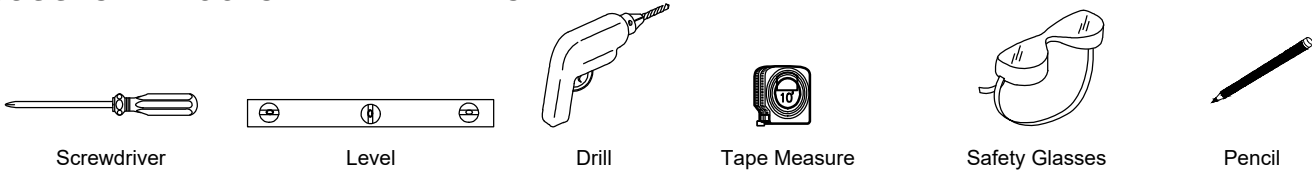

## PARTS & HAREWARE INCLUDED



## INSTALLATION INSTRUCTIONS

①

1>Level the hanging cleat with a level ruler and mark the installation hole position of the hanging cleat with a pencil  
2>Drill holes

②

Insert the anchors into the wall(Use at least 5 anchors).

③

Install the hanging cleat into the wall.  
Use 5x45mm screws to hanging cleat to wall(Use at least 5 screws).

④

Wiring from light fitting

Neutral Wire	⊖	⊖	white(N)
Earth(green/yellow)	⊕	⊕	Green/yellow ⊕
Live Wire	⊖	⊖	black(L)

⑤

Hang the mirror onto the wall.

DETAIL A